



### Full ("Away") Setting



❖ Quick mode:

❖ High Security mode: Code >



❖ Quick mode:

❖ High security mode:   
> code or use Proximity tag



❖ Quick mode:

❖ High Security mode: Code >



to apply to all partitions, or slide a specific partition to the right under



Full Set all: Security >



Press



❖ Quick mode:

❖ High Security mode: > code



Press

### Part ("Home") Setting



❖ Quick mode:

❖ High Security mode: Code >



❖ Quick mode:

❖ High security mode:   
> code or use Proximity tag



❖ Quick mode:

❖ High Security mode: Code >



to apply to all partitions, or slide a specific partition to the left under



Partial Set all: Security > press



Press



❖ Quick mode:

❖ High Security mode: > code



Press or large rounded button (installer-defined)



## Partition & Group Setting

### ❖ Full partition setting:

Code > "Security" menu > "Partitions" tab > select All or specific partition

number/s >



### ❖ Partial partition setting:

Code > "Security" menu > "Partitions" tab > select All or specific partition

number/s >



**Group Setting:** "Groups" tab > press group letter

### ❖ Full partition setting:



Code >  > select All or specific partition number/s > 

### ❖ Partial partition setting:

Code >  > select All or specific partition number/s > 

**Group Setting:** Press group letter

**Note:** Supports up to 3 partitions. Does not support Group setting.


### ❖ Full partition setting:



• **Quick mode:** Partition number > 

• **High Security mode:** Partition number >  > code or use Proximity tag

### ❖ Partial partition setting:

• **Quick mode:** Partition number > 

• **High Security mode:** Partition number >  > code or use Proximity tag



## System Unsetting



Code > "Security" menu >



> code or use Proximity tag



Code >



to unset all partitions, or slide a specific partition to the centre under



> enter code



Unset all: Security > > code > press Unset



Press



❖ Quick mode:

Unset all: Press

❖ High security mode: > code

## Partition & Group Unsetting



Code > "Security" menu > "Partitions" tab > select the Partitions to Unset >



Partition unsetting: Code > > select All or specific partition number(s)



Partition unsetting: Partition number > > code

Group unsetting:

## Duress Unsetting



Duress code >   
Note: Panel is silent (no alarm siren)



> duress code  
Note: Panel is silent (no alarm siren)



## Omitting & Un-Omitting Zones




Code > "Security" menu > "Detectors" tab > select a detector (zone) > slide switch to the right to omit



← > code, ✓ > scroll to Activities menu, ✓ > Omit, ✓ > Zones, ✓ > scroll to select a omit option, ✓ .

## Viewing System Faults



Code > from the Top Bar, press  to view faults



← > code, ✓ > scroll to View menu, ✓ > Fault, ✓ > scroll to view faults

## Viewing Last Alarm / Event Log



Code > "History" menu > press "All" to view all events, or search an event

**Note:** You can filter the search according to specific types of events:  
All / Alarms / Faults / Smart Home / Media Events



← > code, ✓ > scroll to Event Log, ✓ > scroll to view events

## Viewing System Status



i for 2 seconds



❖ **Quick mode:** #? for 2 seconds

❖ **High Security mode:** #? for 2 seconds > code or use Proximity tag



Press \*



❖ **Quick mode:** 4!? for 2 seconds

❖ **High Security mode:** 4!? for 2 seconds > code



## Activating Output



Code ➤  
"Security" menu  
➤  
"Utility Output"  
tab ➤ select  
relevant Utility  
Output button,  
✓



➤ code, ✓  
➤ scroll to  
Activities menu,  
✓ ➤ enter  
Utility Output  
number, ✓.  
**Note:** Must be  
engineer-  
defined



❖ **Quick mode:** Press  
button (1–3) for 2  
seconds  
❖ **High security  
mode:** Press button  
(1–3) for 2 seconds  
➤ code or use  
Proximity tag.  
**Note:** Must be  
engineer-defined



❖ **Quick mode:** Press button (1–3) for 2 seconds  
❖ **High security mode:** Press button (1–3) for 2 seconds ➤ enter code.  
**Note:** Must be engineer-defined





## Activating a Panic Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.



Press  and  together for at least 2 seconds.



Press **1** and **2** together for 2 seconds



Press  and  simultaneously



Press **1** and **2** together for 2 seconds.

## Activating a Fire Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.







Press **4** and **5** together for at least 2 seconds.



Press **3** + **4** together for 2 seconds

## Activating an Auxiliary Emergency Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.



Press **7** and **8** together for at least 2 seconds.



Press **5** + **6** together for 2 seconds



## SMS Commands

**NOTES:** Command words are not case sensitive. A separator between command words may be used (or not). To receive an acknowledgement reply, add **RP** to the end of an SMS command.

**Full Set:** code + S (Example: 1234S)

**Get system status:** code + ST

**Part Set:** code + P

**Omit Zone:** code + OM + zone number

**Group Set:** code + G + select group A--D

**Un-omit Zone:** code + UNOM + zone number

**Full Unset:** code + US

**View last alarm :** code + AL

**Partition Full Set:** code + S: + partition number

**Change FM number:** code + FMPHONE + FM serial number + NEW + new phone number

**Partition Part Set:** code + P: + partition number

**Activate Output:** code + POON + PO number

**Deactivate Output:** code + POOFF + PO number

**Multiple Partition Full/Part Set:** code + S/P: + partition number A, + partition number B, + partition number C, etc.

**Get SIM credit level:** code + CR

**Partition Unset:** code + US: + partition number

**Multiple Partition Unset:** code + US: + partition number A, + partition number B, + partition number C, etc.

## LED Indicators – Elegant Keypad

### Power LED

**On:** Power OK.

**Off:** No power

**Rapid flash:** System fault.

**Slow flash:** System is programming

### Ready LED

**On:** Ready to set

**Off:** Not ready to set

**Slow flash:** Ready to set while entry/exit zone is open

### Set LED

**On:** System in fully set mode

**Off:** System unset

**Rapid flash:** Alarm

**Slow flash:** System in Exit Delay

### Partial Set / Omit LED

**On:** System in partially-set or zone-omited mode

**Off:** No omitted zones

### Tamper LED

**On:** Tamper alarm

**Off:** No tamper alarm

### Fire LED:

**On:** Fire alarm

**Off:** No fire alarm

**Flash:** Fire circuit fault



### LED Indicators – 2-Way Remote Control

Operation	Send command*	Receive Status
Full Set	Green	Red
Partial Set	Green	Orange
Unset	Green	Green
Alarm	Green	Flashing LED

\* If the LED changes to orange, it indicates a low battery condition.

### Defining User Codes – Elegant Keypad

1. ➤ Grand master code (default = 1234) ✓
2. to scroll to **Codes/Tags** ➤ press ✓ twice.
3. to scroll to the user (index number) for defining ➤ press ✓ twice.
4. Enter (or re-enter) a 4–6 digit code, ✓ ; the system beeps and **ACCEPTED** displays

### Registering to the RISCO Cloud

- 1 After the RISCO Cloud has been enabled by your system installer, go to **www.riscocloud.com**
- 2 Fill in your **first and last name**.
- 3 Enter your **e-mail address** as the Login Name (required for 1st-time activation).
- 4 Define **password** (minimum of 6 characters and at least one digit), and then confirm.
- 5 Enter the **15 digits Panel ID** as it appears as printed on the postcard packaged with the main panel. You can also view it on the keypad (see the GT Plus User Manual).
- 6 Complete registration form, and then press **Register**.
- 7 Open the e-mail received at the email account you had defined as the Login Name in step 3, and then click the link to activate your registration to the Cloud.

### Logging in to the RISCO Cloud / Accessing the Web User Application

- 1 Go to **www.riscocloud.com**
- 2 Enter your **user name** and **password** (as defined during the registration process).
- 3 Enter the **system PIN code** (user code).
- 4 Click **Enter**.

### iRISCO Smartphone App

Download the iRISCO Smartphone app from the Apple App store or the Android Play Store.

For additional information see the GT Plus User Manual, available on our website: **www.riscogroup.com**

© RISCO Group 2020. All rights reserved.